

## ADVANCED TECHNICAL MANUAL

**Part #: 265888**  
**Universal Control Card**

Advanced Technical Manual

**TABLE OF CONTENTS**

PRODUCT OVERVIEW .....	3
FEATURES.....	3
CONTROL MODES .....	4
ELECTRICAL SPECIFICATIONS.....	6
Test Probe Jacks .....	6
LED Indicators.....	6
Signal Details .....	6
RJ-45 Network Cable Connections .....	6
COMMUNICATION SPECIFICATIONS.....	7
Overview .....	7
MODBUS Register Specifications .....	7


Advanced Technical Manual

**PRODUCT OVERVIEW**

Envirco's ENV1028 Universal Control Card provides MODBUS network and analog control capabilities to an Envirco Fan Filter Unit equipped with an electrically commutated motor. Three different control modes provide installation versatility by allowing the FFU to be controlled via MODBUS RTU network, analog 0-10 VDC control signal, or by adjusting the onboard potentiometer. The ENV1028 Universal Control Card is fully compatible with all of Envirco's plug & play System Control Consoles using MODBUS RTU. Additional details of the controls modes are provided on page 4.

**FEATURES**

- Networkable Via MODBUS RTU
- 0-10 VDC Analog Control
- Manual Control Via Onboard Potentiometer
- Simple Connections
  - RJ45 For Networking Connection
  - Screw Terminals For Analog Control
  - Test Probe Jacks For DC mV Signal Output Of The Following...
    - RPM
    - Motor Control Set Point
- LED Diagnostics
  - Support for external LED (10mA) remote status notification via 2 Pin MTA connector
  - Onboard green LED for Board Status notification
  - Onboard red LED for Network Traffic
- Powered from Network or Local Supply

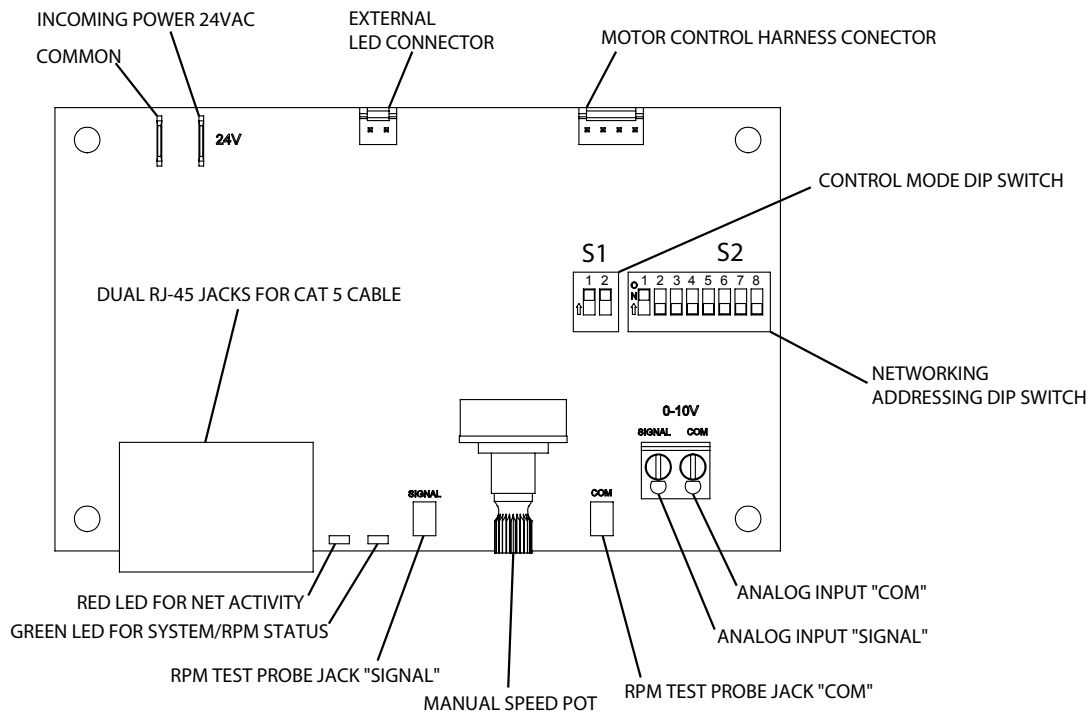



Advanced Technical Manual

**CONTROL MODES**


The ENV1028 operates in one of three selectable modes. The Mode is selected using DIP Switch S1.

- MANUAL control, on-board potentiometer
- ANALOG control, Remote 0-10 VDC
- NETWORK control, MODBUS RTU


Manual Mode = 1 OFF 2 OFF

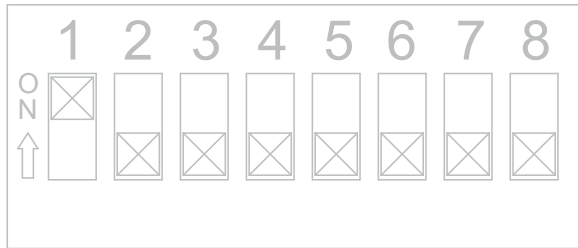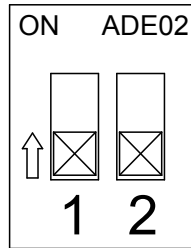


Analog Mode = 1 ON 2 OFF

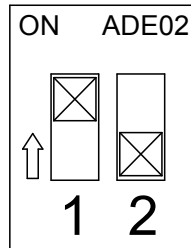

Network Mode = 1 OFF 2 ON

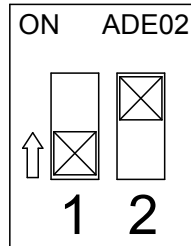

Network Mode = 1 ON 2 ON

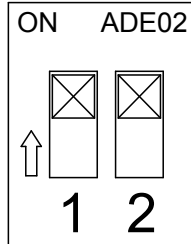

**Note:** Network mode can be configured using either DIP switch setting shown above.

Advanced Technical Manual

**Manual Control Mode:**


In Manual control mode, the motor speed is set using the onboard potentiometer. Onboard potentiometer rotation is CW to increase the motor output.

**Analog Control Mode:**

In ANALOG control mode, the motor output is set using an external 0-10 VDC demand signal.

**Network Control Mode:**

In NETWORK control mode, the motor output is set using MODBUS Register 2. Motor output is specified as a value from 0 to 100 representing a percentage of motor torque output. Each ENV1028 in a MODBUS network must be set to a unique address. The address value is set in binary using the eight DIP switches of switch bank (S2). A maximum of 200 ENV1028 devices is recommended per local area network(LAN). If an Envirco ACC Control Console is the MODBUS master, then addresses should be assigned within the address range supported by the Control Console. Address zero should not be used as it is reserved for global commands. Address switch settings are only checked by the ENV1028 at power-up. Power must be cycled (OFF/ON) before any changes take effect.

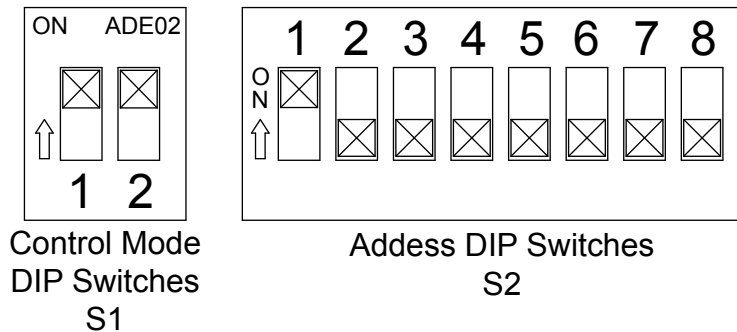

Registers relevant to this mode:

- Register 1 “Start/Stop” (R/W)
  - To enable motor, write a value of 1; To disable motor, write a value of 0
- Register 2 “Motor Set Speed” (R/W)
  - Motor Target speed value. Values may be written from 0 to 100
- Register 6 “RPM” (R)
  - Motor RPM. Read from the motor
- Register 12 “Actual Motor Speed Instruction” (R)
  - Speed control signal applied to the motor by the ENV1028.

(R/W) = Read/Write, (R) = Read Only

### Advanced Technical Manual

#### ELECTRICAL SPECIFICATIONS

Control and Interface Signals:

1. External Speed 0-10V Input
  - Input impedance 20k Ohms.
  - MIN ON-to-OFF threshold: 190mV\*
  - MAX OFF-to-ON threshold: 240mV\*
  - ON (~215mV) to 9.89V linearly scales 1 to 99% speed.
  - 9.89V or more deadbands to 100% speed.
2. External LED Output
  - 10mA regulated
  - LED forward voltages up to 5V
3. RPM Signal
  - Signal Value: mVDC = RPM
  - Ex: 900mV = 900RPM
  - RPM Output Range: ~ 0, 5 to 2000 RPM (0, 5mV to 2000 mV DC)
  - RPM Output Resolution: 5RPM (Zero, 400 steps from 5 to 2000 RPM inclusive)

#### Electrical and Environmental Specifications:

Specification	Min	Typical	Max	Units
Input Voltage	22	24	42	VAC
Supply Frequency	50	50/60	60	Hz
Input Power Consumption	na	na	0.5	VA
Ambient Operating Temperature	0	25	50	C

#### Test Probe JacksPoints:


The test probe jacks may be used to measure the motor rpm or the PWM signal that is being output to the motor.

- In Manual or Analog Control Mode with an Address setting of 1 or greater, the test probe jacks output 0-2000 mVDC representing motor RPM. By changing the address DIP switches to 0, the test probe jacks will output 0-1000 mVDC representing 0-100% demand signal to the motor. The address may be changed without interrupting power to the control card.
- In Network Control Mode, 0-2000 mVDC always represents RPM.

#### LED Indicators:

- Onboard Status LED:  
The Onboard Status LED is software controlled by the unit microcontroller. The Status LED is solid ON when RPM reported by the motor is greater than zero and OFF when RPM reported by the motor is zero.
- External Status LED:  
Support for an external Status LED (10mA current-controlled driver), via a 2-pin MTA connector, for remote system status notification. The external Status LED operates in the same manner as the Onboard Status LED.
- Onboard Net LED:  
The Onboard Net LED is driven directly by the receive data signal. The NET LED shows all network traffic on a 2-wire network. The NET LED is intended to confirm low-level network connectivity, independent of microcontroller or firmware functionality. If A/B network wires are swapped, the NET LED will be normally on, providing quick diagnostics of this common condition.

Net LED Status Definition	
LED OFF	Power Lost or No Communications
LED Flickering	Network Data Traffic In Progress
LED ON	A/B network wires are swapped

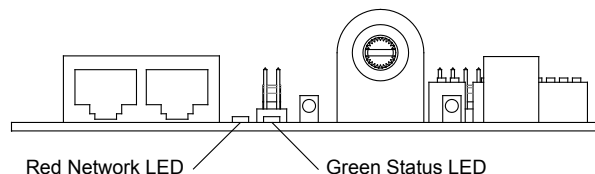

## Advanced Technical Manual

**RJ45 Network Cable Connections:**

1	2	3	4	5	6	7	8
Bus Power Pass Through	0V (GND)	RS-485				0V (GND)	Bus Power Pass Through
		+	NC	NC	-		

**COMMUNICATION SPECIFICATIONS**
**Overview:**

- MODBUS RTU protocol over RS485 (serial)
- 9600 baud rate, word length is 8, parity is none(n), stop bits=1
- 255 unique address values selectable by DIP switch settings
- (recommended network node capacity 200 nodes)
- Slew rate limited transceivers for improved network performance MODBUS Register Summary Table
- **DO NOT USE Crossover Cables. This may damage the control card or render it non-operational.**

**MODBUS Register Specifications:**

Register	Name	R/W	Values & Defaults	Units	Origin	Comments
1	RUN/STOP	RW	0,1	1	RAM	power up from REG 14
2	DEMAND	RW	0-100	%	RAM	power up from REG 10
6	SPEED	R	0,5-2000	RPM	LIVE	
9	STATUS	R	see detail	-	LIVE	
10	DEFAULT SPEED	RW	0-100	50	EEPROM	applies to network only
12	CURRENT SPEED	R	0-100	-	LIVE	
14	DEFAULT RUN/STOP	RW	0,1	1	EEPROM	applies in network mode only

To reset non-volatile registers to factory default values, write 170 (AA hex) to Register 14, and then cycle power.

# Clean air solutions built for you.

MORE INFORMATION AVAILABLE AT [WWW.ENVIRCO.COM](http://WWW.ENVIRCO.COM)

## ■ Industrial

### Cleanroom Products

- » MAC 10<sup>®</sup> LEDC
- » MAC 10<sup>®</sup> IQ<sup>™</sup>
- » MAC 10 Original
- » Ducted Ceiling Module:  
DCM & RSR
- » AC or DC Control Systems

## ■ Hospital & Healthcare

### Hospital & Healthcare

- » IsoClean<sup>®</sup> and IsoClean  
with Ultraviolet Light
  - » AirCeil<sup>®</sup>
  - » Hospi-Gard<sup>®</sup> Room  
Pressure Monitor
- ### Enviramedic Products
- » HOR Horizontal Flow  
Enclosure
  - » HCF Horizontal Flow  
Surgery Room
  - » VOR Vertical Flow Surgery  
Isolator

## ■ Pharmaceutical

### Pharmaceutical & Medical Device

- » MAC 10<sup>™</sup> and  
Mac 10 IQ Rx<sup>™</sup>
- » Unimodule M-2 Vertical  
Unidirectional Flow  
Workstation
- » METD 100% Exhausted  
Vertical Flow Workstation
- » Unidirectional Downflow  
Module

## ■ Laboratory & Research

### Laboratory & Research

- » 100-Plus Horizontal or  
Vertical Flow Clean Bench
- » Unidirectional Flow  
Horizontal Flow Bench (LF)
- » TT Table Top Horizontal  
Flow Clean Bench
- » EnviraLab Sterility Module:  
ESM
- » NSF 49 Listed Biological  
Safety Cabinet

Envirco MAC 10 and VE5 are registered trademarks of Envirco, USA. Specifications subject to modifications or changes without notice. US patents 4,560,395 and 5,470,363. Other patents issued and pending in foreign countries. Special thanks to Connect2Cleanrooms for cleanroom photography.

### Envirco USA

101 McNeill Road | Sanford, NC 27330, USA  
tel: 919.775.2201 | toll free: 800.884.0002 | fax: 800.458.2379  
[www.envirco.com](http://www.envirco.com) | email: [info@envirco.com](mailto:info@envirco.com)

### Envirco European Sales

The Cavendish Centre, Winnall Close | Winchester, Hampshire; S023 0LB, UK  
tel: +44(0)1962.840465 | fax: +44(0)1962.828619  
[www.envirco-emea.com](http://www.envirco-emea.com) | email: [rflaherty@airsysco.com](mailto:rflaherty@airsysco.com)

### Asian Sales and Manufacturing

Building #1 | No.19 Xiangpu Road, Shenpu, SIP | Jiangsu Province, PRC 215021  
Tel: +86.512.62967272 | Fax: +86.512.62967221  
[www.envirco.com](http://www.envirco.com) | email: [info@envirco.com](mailto:info@envirco.com)

